Restoring the original settings (Factory Reset) お買い上げ時の設定への戻しかた (ファクトリー・リセット)



When you carry out a Factory Reset, the user patches, phrases, and arpeggio settings you've created will disappear.

- 1. While together holding down both the PRESET and USER buttons, switch on the SH-201.
- **2. Press the blinking WRITE button.** If you decide to cancel, press the CANCEL button.



ファクトリー・リセットを行うと、作成したユーザー・パッチやフレーズ、アルペジオの設定などは消えてしまいます。

- **1.** PRESET ボタンと USER ボタンを押しながら、SH-201 の 電源を入れます。
- **2.** 点滅している WRITE ボタンを押します。 中止する場合は CANCEL ボタンを押します。

Patch list /パッチ・リスト

| PRESET | Name | Bank | Select | Program Change |
|--------|--------------|------|--------|-------------------|
| FRESEI | | MSB | LSB | |
| A-1 | Reso Bass | | | 1 |
| A-2 | Fat Saw Lead | | | 2 |
| A-3 | SilkyStrings | | | 3 |
| A-4 | RingModBell | 87 | 64 | 4 |
| A-5 | OSC SyncLead | 0/ | | 5 |
| A-6 | SuperSawBrs | | | 6 |
| A-7 | Electro Seq | | | 7 |
| A-8 | Logic Noize | | | 8 |
| B-1 | Fat Bass | | | 9 |
| B-2 | 201 Lead | | | 10 |
| B-3 | SlowSoft Pad | | 64 | 11 |
| B-4 | SuperSawKey | 87 | | 12 |
| B-5 | FB OSC Lead | 0/ | | 13 |
| B-6 | Poly Synth | | | 14 |
| B-7 | Sweep Arp | | | 15 |
| B-8 | S&H FX 1 | | | 16 |
| C-1 | Deep Bass | | 64 | 17 |
| C-2 | Soft Lead | | | 18 |
| C-3 | BriteStrings | | | 19 |
| C-4 | SH-201 EP | 87 | | 20 |
| C-5 | Sweep Up | 0/ | | 21 |
| C-6 | Trancy 201 | | | 22 |
| C-7 | Sliced Pd/Bs | | | 23 |
| C-8 | NoiseWhistle | | | 24 |
| D-1 | SH Bass 101 | | | 25 |
| D-2 | JP 5th Lead | | | 26 |
| D-3 | JP-8 SoftPAD | | | 27 |
| D-4 | JP-8 Clav | 87 | 64 | 28 |
| D-5 | JP-8SweepPad | | | 29 |
| D-6 | JUNO Brass | | | 30 |
| D-7 | S&H FX 2 | | | 31 |
| D-8 | INIT PATCH | | | 32 |

| USER | Name | Bank Select | | Program |
|------|--------------|-------------|-----|---------|
| | | MSB | LSB | Change |
| A-1 | TB Dist Lead | | 0 | 1 |
| A-2 | SoftSaw Lead | | | 2 |
| A-3 | StackStrings | | | 3 |
| A-4 | RingBellStk | 87 | | 4 |
| A-5 | SBF FeedBack | 07 | | 5 |
| A-6 | Stack Brass | 1 | | 6 |
| A-7 | Trance Seq | 1 | | 7 |
| A-8 | FormantMover | | | 8 |
| B-1 | Brite Bass | | | 9 |
| B-2 | OnlyTimeLead |] | | 10 |
| B-3 | SquPadSplit | | | 11 |
| B-4 | OD Glass Pad | 87 | 0 | 12 |
| B-5 | Club Split | 07 | | 13 |
| B-6 | modest | İ | | 14 |
| B-7 | PolyChordArp | 1 | | 15 |
| B-8 | mod-e-rate | | | 16 |
| C-1 | Angry Bass | | 0 | 17 |
| C-2 | Simple SquLd | | | 18 |
| C-3 | Alaska Pad | 1 | | 19 |
| C-4 | Soft Keys | 87 | | 20 |
| C-5 | 5th Pad | 87 | | 21 |
| C-6 | ProfessorKey | 1 | | 22 |
| C-7 | Trance Keys |] | | 23 |
| C-8 | AsteroidBelt | | | 24 |
| D-1 | d&b Bass | | | 25 |
| D-2 | Cheesy Lead |] | 0 | 26 |
| D-3 | Retro Str |] | | 27 |
| D-4 | Distant Ring | 87 | | 28 |
| D-5 | FB Ring Lead | 87 | | 29 |
| D-6 | Stack Saws | | | 30 |
| D-7 | Mayhem | | | 31 |
| D-8 | Gamelan Bell | | | 32 |

Effect template list /エフェクト・テンプレート・リスト

| DELAY | Name | DELAY | Name |
|-------|--------------|-------|--------------|
| 1 | Simple Delay | 5 | Analog Delay |
| 2 | 1 Shot Delay | 6 | Mod Delay |
| 3 | Medium Delay | 7 | Chorus 1 |
| 4 | Long Delay | 8 | Chorus 2 |

For details on selecting an effect template, refer to p. 45 of the SH-201 owner's manual.

| REVERB | Name | REVERB | Name |
|--------|----------|--------|---------|
| 1 | Room 1 | 5 | Hall 1 |
| 2 | Room 2 | 6 | Hall 2 |
| 3 | Studio 1 | 7 | Plate 1 |
| 4 | Studio 2 | 8 | Plate 2 |


エフェクト・テンプレートの選びかたについては、SH-201 取扱説明書 P.45 をご覧ください。

Notice of changed specifications

Due to a change in the specifications of this product, it operates differently than described in the owner's manual. Please accept our apologies, and make the following correction to the manual.

INTERVAL buttons (p. 30)

Change: -5 button \rightarrow 5th button

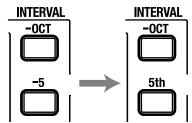

When you press the 5th button, the pitch of OSC 2 is raised 7 semitones (a perfect fifth) above OSC 1.

- * Parameters other than PITCH will not be changed.
- * The INTERVAL button will not light.

Selecting a tone when using DUAL/SPLIT (p. 46, 47)

If you press the UPPER button or LOWER button while using Dual or Split, the indicator of the button you pressed will blink, and the indicator of the other button will light. Now when you operate the panel buttons or knobs, your changes will affect the tone whose indicator is blinking.

Functionality added to the recorder

Now you can choose the type of data that will be recorded (p. 24) or erased (p. 25).

From the REC standby state or while recording a phrase, press a BANK button (A–D).

• **A (All):** All of the following (B, C, D) listed

below (Default state)

• **B (Bender):** Pitch bender lever operations only

• C (Controller): Knob operations

(only parameters in the table on p. 72)

• **D (notes):** Keyboard's performance data only

Other notes


- Don't set the CLOCK SOURCE parameter (p. 68) to "MIDI" or "USB" unless you're synchronizing the SH-201 to MIDI clock received from an external device. With these settings, the arpeggiator, recorder, and tempo-synchronized LFO will not operate correctly.
- If, while recording (p. 24), you specify the length of the phrase to be recorded, all performance data previously recorded for that phrase will be erased.
- If you want to control Active Expression (p. 20) from the D Beam controller, turn the ACTIVE EXPRESSION parameter (p. 65) "ON." (Hold down the CANCEL button and press the EXPRESS button.)

仕様変更のお知らせ

製品仕様の変更により、取扱説明書とは動作が異なる部分があります。ここに謹んでお詫び申し上げるとともに、以下のように訂正させていただきます。

INTERVAL ボタン (P.30)

変更:-5 ボタン → 5th ボタン

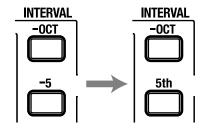

5th ボタンを押すと、OSC 2 のピッチが OSC 1 より 7 半音(完全 5 度)高くなります。

- ※ PITCH 以外のパラメーターは変化しません。
- ※ INTERVAL ボタンは点灯しません。

DUAL/SPLIT 時のトーン選択(P.46、47)

デュアル/スプリットの状態で UPPER ボタンまたは LOWER ボタンを押すと、押したボタンのランプが点滅し、もう一方のボタンのランプは点灯します。 パネル上のボタンやつまみを操作すると、ランプが点滅しているほうのトーンが変化します。

レコーダーの追加機能

レコーディング (P.24)、およびイレース (P.25) するデータの種類を選べるようになりました。

REC スタンバイ状態、またはフレーズの記録中に BANK ボタン(A \sim D)を押します。

A (AII): 下記B、C、D すべて(初期状態)

• **B (Bender)**: ピッチ・ベンド・レバーの操作のみ

• C (Controller): つまみの操作

(P.72の表にあるパラメーターのみ)

• **D** (notes): 鍵盤の演奏情報のみ

その他の注意事項

- CLOCK SOURCE パラメーター (P.68) は、SH-201を 外部機器からの MIDI クロックに同期させる場合以外、 「MIDI」、「USB」にしないでください。 アルペジエーターやレコーダー、テンポに同期させた LFO などが正しく動作しなくなります。
- レコーディング時 (P.24) に、記録するフレーズの長さを設定すると、そのフレーズに記録されていた演奏データは消去されます。
- Dビーム・コントローラーでアクティブ・エクスプレッション(P.20)を使う場合は、ACTIVE EXPRESSION パラメーター(P.65)を「ON」にしてください。 (CANCEL ボタンを押しながら EXPRESS ボタンを押す)